

reMarkable

User Guide


0	Introducing reMarkable Paper Pro Move	4
0.1	About reMarkable Paper Pro Move	4
0.1.1	About reMarkable Paper Pro Move	4
0.1.2	CANVAS color display	4
0.1.3	Battery and charging:	5
0.1.4	Power button	5
0.1.5	Model name location	6
0.2	reMarkable Paper Pro Move accessories	7
0.2.1	Markers and Marker tips	7
0.2.2	Folio	11
1	Getting started	12
1.1	Setting up your reMarkable Paper Pro Move	12
1.1.1	What you need to get started	12
1.1.2	Starting up	12
1.1.3	Connect to your account	16
1.1.4	Choose right-handed or left-handed mode	17
1.1.5	Handwriting conversion	18
1.2	Charging your paper tablet	19
1.3	Updating to the latest version	20
1.3.1	How to check for the latest update	20
1.3.2	How to set your reMarkable Paper Pro Move to auto-update	20
1.3.3	How to update manually	20
1.3.4	Updating the desktop app - Mac and Windows	20
1.3.5	Updating the mobile app - iOS	21
1.3.6	Updating the mobile app - Android	21
2	Settings	22
2.1	Settings	22
2.2	General settings	22
2.2.1	Flight mode	22
2.2.2	Account	22
2.2.3	Factory reset	23
2.2.4	Software	23
2.3	Wi-Fi settings	24
2.4	Battery settings	25
2.4.1	Power saving modes	25
2.4.2	Power off	25
2.5	Storage settings	26
2.5.1	Device syncing	26
2.6	Security settings	26
2.6.1	How to add a passcode	26
2.6.2	How to change or remove a passcode	26
2.7	Language settings	27
2.7.1	Changing the keyboard language	27

2.7.2 Using the onscreen keyboard	27
2.8 Accessibility settings	27
2.9 Help	27
2.9.1 About	27
3 Regulatory Compliance and Important Safety Information for model RM03A reMarkable Paper Pro Move	28
3.1 E-label	28
3.2 Important safety and handling information	30
3.2.1 Handling	30
3.2.2 Cleaning	30
3.2.3 Operating temperature	30
3.2.4 Repairing	30
3.2.5 Battery	30
3.2.6 Charging	31
3.2.7 Choking hazard	31
3.2.8 Distraction	31
3.2.9 Radio frequency energy exposure and interference	31
3.2.10 Medical device interference	32
3.3 Battery damage	32
3.4 EU Recycling Information (WEEE)	32
3.5 Natural Resources Canada (NRCAN)	33
3.6 EU Declaration of conformity (CE)	33
3.7 EU compliance statement (CE)	33
3.8 USA compliance statement (FCC)	34
3.9 Canada compliance statement (IC)	35
3.10 Australia and New Zealand compliance statement	36
3.11 Taiwan compliance statement (NCC/BSM)	36
3.12 Singapore compliance statement	38
3.13 Japan compliance statement	38
3.14 South Korea compliance statement (KC-R and KC Safety)	38
3.15 Thailand compliance statement (Sdoc)	39
3.16 South Africa compliance statement (ICASA)	39
3.17 UAE compliance statement (TRA, ECAS)	39
3.18 India compliance statement (BIS)	40
3.19 Brazil compliance statement (ANATEL)	40

0 Introducing reMarkable Paper Pro Move

0.1 About reMarkable Paper Pro Move

0.1.1 About reMarkable Paper Pro Move

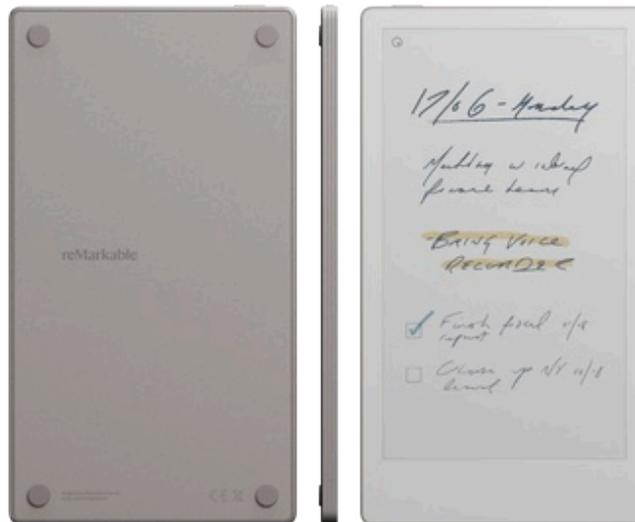

Dimensions:

- Size: 107.8 x 195.6 x 6.5 mm
- Weight: 230 grams (0.51 lb)

Storage and RAM

- 64 GB internal storage
- 2 GB LPDDR4 DRAM

Processor

- 1.7 GHz dual A55 core ARM

Operating system

- Codex, a custom Linux-based OS

0.1.2 CANVAS color display

Specifications:

- E Ink Gallery™ 3 e-paper display
- 7.3" color digital paper display
- 954 x 1696 resolution (264 PPI)
- Multi-point capacitive touch
- Paper-like surface friction
- Sunlight readable
- Partially powered by E Ink technology

- Palm rejection
- Backlight

0.1.3 Battery and charging:

Specifications

- Lithium-ion (Li-ion) battery
- Rechargeable (USB type C)
- 2334 mAh @ 3.85 V (8.99 Wh)

0.1.4 Power button

The power button is located on the top left corner of your reMarkable Paper Pro Move. It's used for powering on and off, as well as the sleep and wake functions.



How to use the power button:

- Put the device in sleep mode with a short power button press. The “**reMarkable is sleeping**” message will appear on the screen.
- Wake the device from sleep with a short power button press.
- Turn off reMarkable Paper Pro Move with one of the following methods
 - a) pressing the power button for 3 seconds. You will then be asked whether you want to turn off the device or not.
 - b) pressing the power button for at least 10 seconds
- Turn on reMarkable Paper Pro Move by pressing in the power button for two seconds or until the backlight leds starts to blink
- Set the reMarkable Paper Pro Move into **factory reset mode*** by pressing the button for 25 seconds


**when the device is in factory reset mode you can use the reMarkable App or web interface to flash new software*

Read more about sleep and other power-saving modes in [battery settings](#).

0.1.5 Model name location

The device model number can be found:

- In the first 5 alphanumeric characters in the serial number on the rear side.
- By removing the bottom right rubber foot.

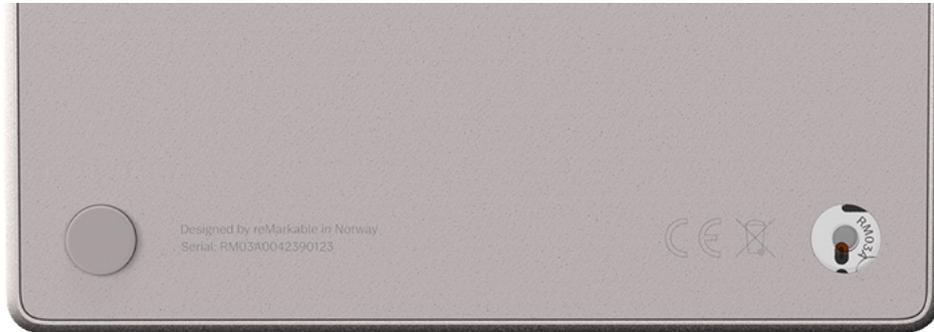

0.2 reMarkable Paper Pro Move accessories

0.2.1 Markers and Marker tips

MARKER

The Marker is an inseparable part of the paper-like experience. It's designed to deliver just the right friction and draws digital ink on reMarkable Paper Pro Move with incredibly low lag. An exceptionally precise tool, down to the smallest details.



Specifications

- Active pen technology
- Compatible with reMarkable Paper Pro and reMarkable Paper Pro Move.
- 80 mAh battery capacity
- NFC Wireless charging when magnetically docked to device
- Special high-friction Marker tip
- 4,096 levels of pressure sensitivity
- 60 degrees of tilt provides an exceptional writing experience
- Weight: 15 g

MARKER Plus

Marker Plus is an unrivaled digital writing instrument. Weighted for a balanced, authentic writing experience. Along with its precise tip, the Marker Plus has a second pressure sensor built into the top end, which allows you to quickly erase whatever you're working on by flipping it upside down.



Specifications

- Active pen technology
- Compatible with reMarkable Paper Pro and reMarkable Paper Pro Move.
- 80 mAh battery capacity
- NFC Wireless charging when magnetically docked to device
- Special high-friction Marker tip
- 4,096 levels of pressure sensitivity
- 60 degrees of tilt provides an exceptional writing experience
- Built-in eraser
- Weight: 19 g

USING YOUR MARKER

Pressure sensitivity

The marker is pressure sensitive (4,096 levels to be exact) which allows you to draw thicker and thinner lines just by adjusting your pressure on the marker.

Tilt

The marker reacts to tilt angles up to 60 degrees relative to the vertical position, which lets you draw and write with a paper-like feeling. By tilting the marker you can add shading and vary the thickness of your stroke. The tilt is only available for certain sketching tools. Read more about it [here](#).

Rest your hand on the display

The reMarkable Paper Pro Move display has palm rejection technology which enables you to draw, write and navigate while resting your palm on the display.

MARKER TIPS

The Marker tips are carefully designed to deliver a paper-like writing experience. Just like a traditional pencil, swapping out a blunt tip for a fresh one helps keep your handwriting both smooth and precise. Each Marker comes packaged with spare tips stored in the Marker box.



Durability

The durability of Marker tips depends on your writing technique and is therefore individual to every person. Both the amount of pressure you apply when taking notes or drawing on the CANVAS display, and how often you use your reMarkable Paper Pro Move will affect how often you need to replace them.

Our best estimate for an average person who writes on their reMarkable Paper Pro Move every day is anywhere between three and seven weeks. While it will wear down slowly over time, you'll still be able to write and use the Marker tip right up until it can no longer connect with the display.

However, the tip will get blunter and may feel less comfortable to use before this happens. As with any precision instrument, from a chef's knife to a carpenter's chisel, you'll get the best from your Marker if you keep it sharp.

Replacement Marker tips are available for purchase from our webshop.

0.2.2 Folio

BOOK FOLIO

The Book Folio allows you to keep your reMarkable Paper Pro Move in its cover while you're working. Designed in conjunction with reMarkable Paper Pro Move, Book Folio provides smart and functional protection for your paper tablet and Marker.

Opening and closing the front cover of the Book Folio will trigger a sensor in the reMarkable Paper Pro Move, which makes it possible for the reMarkable Paper Pro Move to know whether the Book Folio is open or closed.

When closed, a magnetic marker securement strap can be magnetically attached to the front cover of the Book Folio to prevent the Marker from detaching from the reMarkable Paper Pro Move.

It is available in three different versions, where the difference is what material is used on the outside of the folio. It is available with genuine leather outer material and 100% recycled PET outer material. The materials will be available in different colors.



WILL THE FOLIO I GOT WITH MY REMARKABLE 1, REMARKABLE 2 OR REMARKABLE PAPER PRO WORK WITH REMARKABLE PAPER PRO MOVE?

reMarkable Paper Pro Move has different physical dimensions and will not fit in a Book Folio designed for reMarkable 1, reMarkable 2 or reMarkable Paper Pro.

WILL ANY OF MY TYPE FOLIOS WORK WITH REMARKABLE PAPER PRO MOVE?

reMarkable Paper Pro Move does not have a type folio interface and will not work with reMarkable 2 Type Folio or reMarkable Paper Pro Type Folio.

1 Getting started

1.1 Setting up your reMarkable Paper Pro Move

Turn on your reMarkable Paper Pro Move and follow the setup assistant to guide you through the process.

The setup consists of a few simple steps that will get your reMarkable Paper Pro Move ready to go. The device arrives partially charged and doesn't need to be charged before setting up.

Warning: To avoid damage or injuries read [important safety and handling information](#) before using your reMarkable Paper Pro Move.

1.1.1 What you need to get started


What you need to get started:

- A reMarkable Paper Pro Move.
- USB-C cable and USB power adapter/brick.
- A smartphone or computer.
- Access to a wireless (Wi-Fi) network.


1.1.2 Starting up

Step by step:

1. Press and hold the power button to get started
2. Start the setup by clicking next.

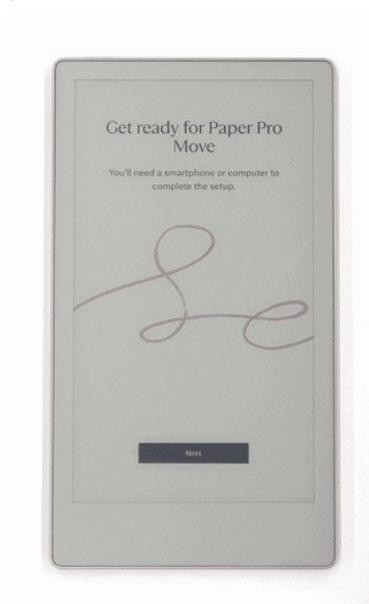

3. Attach your marker to the top-right edge of your device. Or click bottom right to continue setup without a marker.

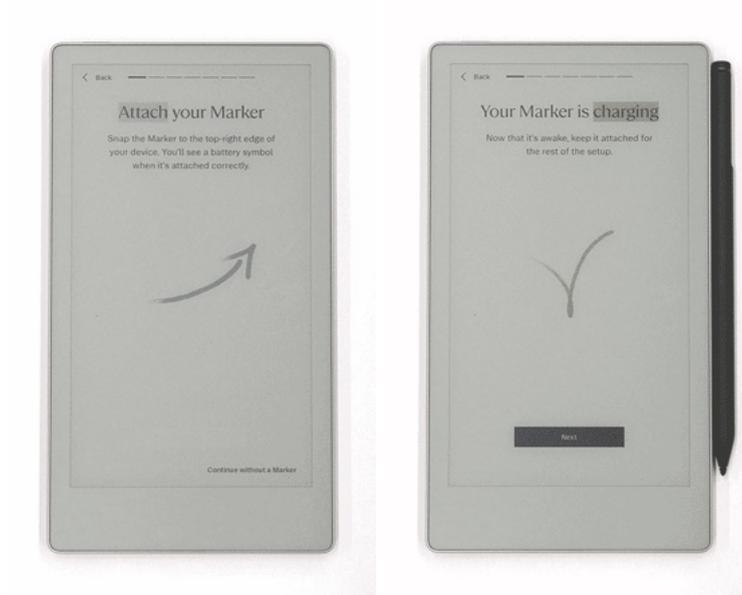


4. See the digital paper refresh for the first time. This keeps your display looking clean and sharp.




Connect to Wi-Fi


5. Choose an available Wi-Fi network.

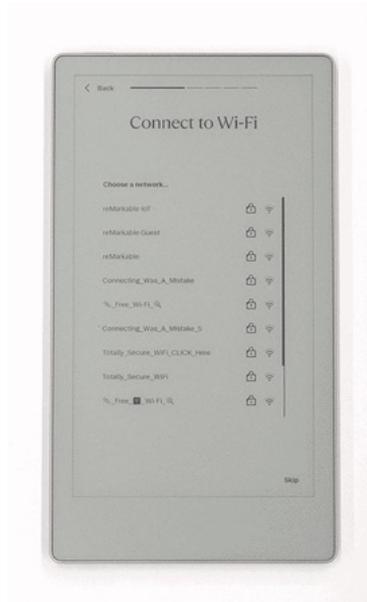

6. If necessary, type the password and tap **Enter**.

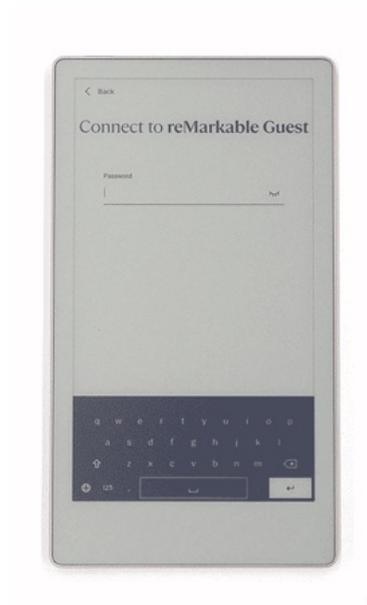


7. Tap **Enter** to connect to the Wi-Fi network. Success! Tap **Next**.

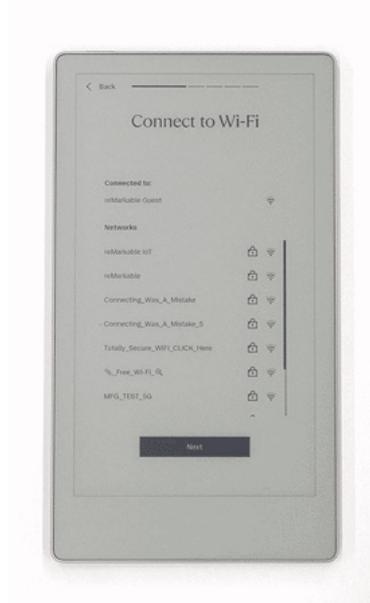

Note: You can choose to skip this step and connect to Wi-Fi from the **Settings** menu later. This is not recommended, as your reMarkable Paper Pro Move will not be connected to the reMarkable cloud and your files will not be synced and stored. Wi-Fi is also necessary to get the latest updates for your reMarkable Paper Pro Move.


8. Update to latest software. Click “update and restart”, wait for it to complete.

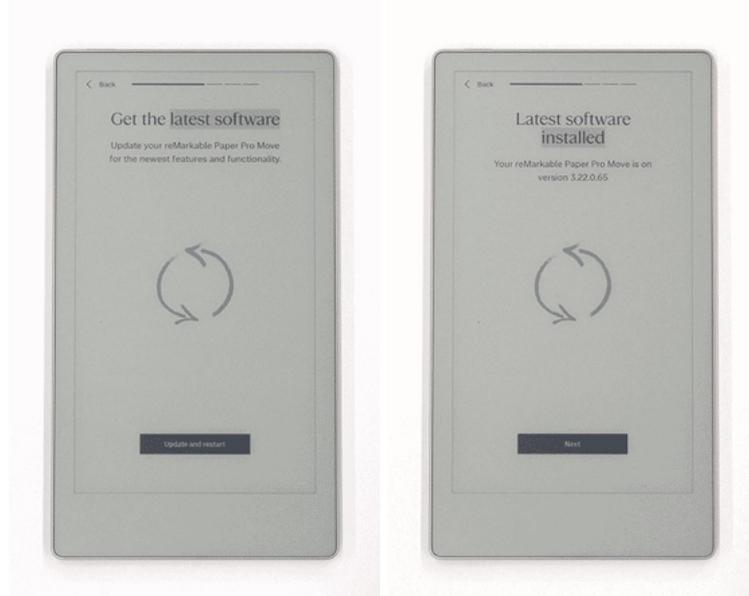

1.1.3 Connect to your account

Connect your reMarkable Paper Pro Move to the reMarkable cloud to be able to seamlessly transfer documents and ebooks to your paper tablet. The reMarkable cloud also allows you to access your content from our mobile and desktop applications and functions as a backup for your notes if you lose your device.

9. Log into my.remarkable.com/pair. Enter the code provided by the website. If five minutes have passed and the one-time code is no longer valid, tap **Get new code**.

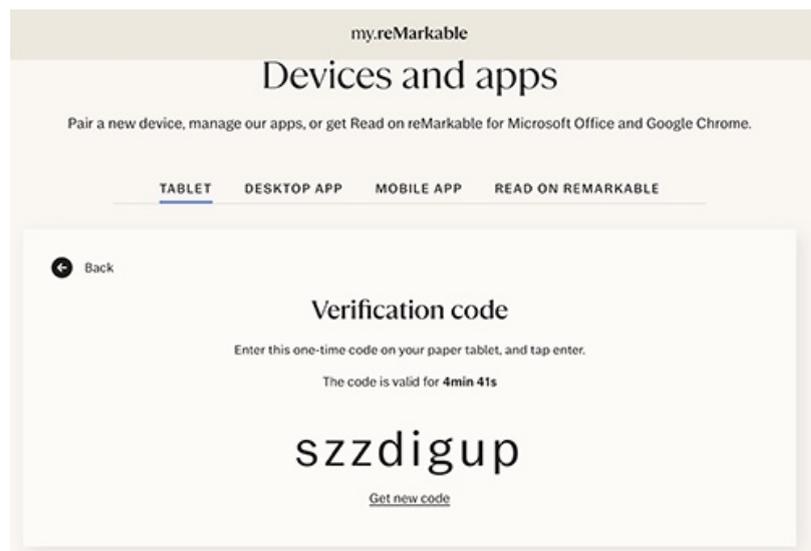

10. After logging in you have paired successfully! You're connected. When connected, the device will be marked with a checkmark in your browser window at my.remarkable.com.



11. Enter passcode is voluntary, add your passcode or skip in the bottom right corner.



1.1.4 Choose right-handed or left-handed mode

12. Choose between right-handed or left-handed mode. This can be changed later in **Accessibility Settings**.




13. After setting up, you will be guided through a tutorial.



1.1.5 Handwriting conversion

Select the language for the **handwriting conversion** tool by entering Settings > Language and keyboard.

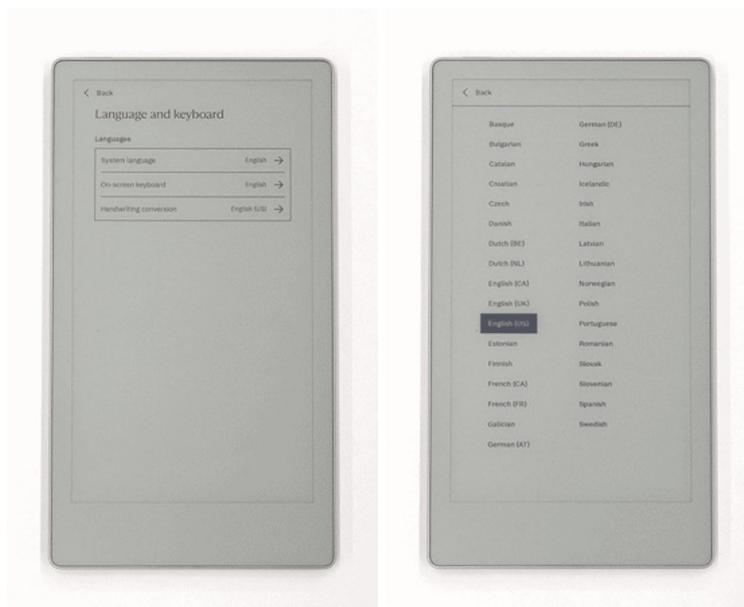

1.2 Charging your paper tablet

Use the USB-C cable from the reMarkable box to charge your reMarkable Paper Pro Move.

Plug the USB-C cable end to the USB-C charging port and the USB end to a USB power plug, or to your computer.

Check whether your reMarkable Paper Pro Move is charging when turned on:

- The **Battery indicator** on the home screen will change from a battery icon to a charging icon.
- Swipe down in the top right corner to expand the charging section.



The icon shows full battery and no charging.



The icon shows nearly full battery and charging.

If the paper tablet is out of battery and the charger is inserted the screen will briefly flash once the paper tablet has sufficient battery to turn on.

1.3 Updating to the latest version

It is critical to have the latest version for reMarkable Paper Pro Move to work as intended and for you to get the latest functionality. You find which software version you are running in **Settings > Software**.

Read about reMarkable latest software updates on our blog or check out the [Release log](#) for a detailed list of released functionality.

1.3.1 How to check for the latest update

Your device is by default set to auto-update, which is recommended for you to always have the latest updates and the newest functionality.

Step-by-step instructions:

1. Look for a notification in the bottom corner of the home screen.
2. The notification will ask you to restart your device.
3. Restart your device to complete the installation.

1.3.2 How to set your reMarkable Paper Pro Move to auto-update

Step-by-step instructions:

1. Tap **Menu** in the top right corner.
2. Tap **Settings** in the sidebar menu.
3. Tap **Software**
4. Here you'll be able to turn automatic updates on or off. Your device is set to auto-update by default.

1.3.3 How to update manually

Step-by-step instructions:

1. Tap **Menu** in the top right corner.
2. Tap **Settings** in the sidebar menu.
3. Tap **Software**
4. Tap **Check for updates** to see if there are any new updates available.
5. If new version found, update will start automatically
6. When the download is finished, click **Restart device** to complete the update.

1.3.4 Updating the desktop app - Mac and Windows

When a new software update is available for the desktop app, you'll see a notification to update. You can also update the desktop app by going to my.remarkable.com and clicking Manage apps under Desktop app.

1.3.5 Updating the mobile app - iOS

If you've got auto-updates enabled on your iPhone, your app will be updated automatically.

How to turn on automatic updates:

1. Go to **Settings**.
2. Tap **App Store**.
3. Switch updates on.

How to update manually:

1. Open the **App Store**.
2. Tap your profile icon at the top of the screen.
3. Find reMarkable, and tap **Update**.

If the reMarkable app isn't listed, you have the latest version installed on your phone.

1.3.6 Updating the mobile app - Android

If auto-updates are enabled, your app will be updated automatically.

How to turn on automatic updates:

1. Open **Google Play Store**.
2. Tap your profile icon at the top of the screen.
3. Tap **Manage apps & device**.
4. Tap **Manage** and find reMarkable.
5. Tap the app, then open **Details** by tapping **More**.
6. Select **Enable auto update**.

You can also update the app manually in Google Play Store:

1. Open **Google Play Store**.
2. Tap your profile icon at the top of the screen.
3. Tap **Manage apps & device**.
4. Tap **Update**. If "Update" isn't an available option, you've got the latest version of the app installed.

2 Settings

2.1 Settings

Settings can be reached from the home screen by tapping Menu (☰) in the top left corner. Then navigate to the settings you need: General, Wi-Fi, Battery, Storage, Security, Accessibility.

2.2 General settings

General settings enable you to update to the latest software and turn auto-update on or off. Here you can also find your account details and log in to your account to transfer files between your connected apps.

2.2.1 Flight mode

Some airlines are very strict when it comes to Flight mode, and it is not necessarily sufficient to show that Wi-Fi is turned off. Flight mode can be enabled or disabled under General settings or at the section found when swiping down on the top right corner in the home screen. You'll see an icon on the home screen when flight mode is turned on.

2.2.2 Account

Connect your device to a reMarkable account to import files to your device via the reMarkable cloud.

If you didn't connect your device to your reMarkable account in the setup process, you can do this manually in account settings. Your reMarkable Paper Pro Move must be connected to Wi-Fi in order to connect.

How to connect your device to your account:

1. Create a new account or log in to an existing reMarkable account at my.remarkable.com.
2. Get a one-time code and enter it on your reMarkable Paper Pro Move.
3. You're now connected to the reMarkable cloud.

You can find a guide on setting up your reMarkable Paper Pro Move [here](#). You can log out of your account at any time by tapping **Log out**.

Note that your account can only be connected to one device at the time

2.2.3 Factory reset

By doing a factory reset all your files and settings on your reMarkable Paper Pro Move will be erased. Performing a factory reset is an easy step-by-step process that can be found under **Account** in **General settings**.

If you pair your device again with a one time code, all the files that are synced to the cloud will be synchronized and made available again. After the factory reset is done, your reMarkable Paper Pro Move will start up with the setup and onboarding procedures.

Like with any other operating system, we cannot guarantee that files are erased permanently, since all files can be restored by using specialized tools.

2.2.4 Software

Under Software you'll find information about which software version that's installed on your device and download the latest version.

How to update to the latest version:

1. Under **General settings**
2. Tap **Software**
3. Tap **Check for updates** to see if there are any new updates available.
4. If new version found, update will start automatically
5. When the download is finished, click **Restart device** to complete the update.

Your device is by default set to auto-update, which is recommended for you to always have the latest updates and the newest functionality. With auto-update enabled you'll get a notification on the home screen to restart the device when a new version has been downloaded. You can turn auto-update off by tapping the on/off switch.

2.3 Wi-Fi settings

All available Wi-Fi networks will appear in Wi-Fi Settings. Switch Wi-Fi on/off in the top right corner.

How to connect to Wi-Fi

1. Connect to Wi-Fi by choosing the network you want to connect to, and enter a password if required. The lock icon indicates that a password is required to connect to the Wi-Fi network.
2. The device will say **Connecting to ---** when your device is connecting to the selected network.
3. When you are successfully connected a white dot will appear next to the Wi-Fi name, as well as the text **Connected to ---**. The signal strength is indicated by the icon next to the Wi-Fi name.

Your reMarkable Paper Pro Move will automatically reconnect to a known Wi-Fi network.

Please note that it's not possible to connect to Wi-Fi networks that require a browser window to open.



Wi-Fi Fully connected



Wi-Fi disconnected

2.4 Battery settings

Battery settings under General settings allows you to enable or disable automatic sleep.

2.4.1 Power saving modes

Sleep

reMarkable Paper Pro Move uses a minimum amount of power when sleep mode is enabled. If automatic sleep is activated, your reMarkable Paper Pro Move will go into sleep after 20 minutes of inactivity. The device is not connected to Wi-Fi while in sleep mode.

- **Enter sleep mode** by pressing the power button once
- **Wake the device** by pressing the power button

2.4.2 Power off

- **Turn off** your reMarkable Paper Pro Move by holding down the power button and tapping Turn off

If auto sleep is disabled, your device will stay on until the battery is empty.

2.5 Storage settings

Storage gives an overview of how much free space is left on your device. The reMarkable Paper Pro Move offers 64 GB of internal storage.

2.5.1 Device syncing

How to check the status of the connection to the cloud:

- Go to **Settings** and select **Cloud settings** ().
- Select **Check sync**.
- A status of the cloud connection will be displayed. In the case of sync issues, try restarting your device.

2.6 Security settings

Add extra security by enabling a passcode for your device. You'll be asked for your passcode when the device is turned on or woken from sleep mode. The passcode can only be reset from Security settings, but you have an unlimited number of trials to unlock your device.

After several failed password attempts, you'll get a lockout timer. The lockout timer will increase for every failed attempt. You're able to factory reset your device if you forget your passcode. If you try the wrong passcode too many times, you'll be able to reset your device by following the instructions on the device and visiting my.remarkable.com.

2.6.1 How to add a passcode

Step-by-step instructions:

1. Go to **Settings**.
2. Tap **Security** () and toggle Passcode to **On**.
3. Enter the new passcode.
4. Verify the new passcode.

Note: If the passcodes don't match, you have to try again.

2.6.2 How to change or remove a passcode

Step-by-step instructions:

1. Go to **Settings** and tap **Security** ()
2. Tap on **Change passcode** or toggle Passcode to **Off**
3. Enter your old passcode

2.7 Language settings

Go to **language and keyboard settings** under **General settings** to choose between keyboard languages and set the language for handwriting conversion.

Your reMarkable tablet has an onscreen keyboard that appears when you need to type in information. You can find your default keyboard in language settings.

2.7.1 Changing the keyboard language

- Tap the language currently displayed to change to another keyboard language.
- You can also change the keyboard language by tapping the language icon (🌐) in the onscreen keyboard.

2.7.2 Using the onscreen keyboard

- Tap the number key **123** to enter numbers or symbols.
- Tap the (☰) key for additional symbols.
- Tap the letter key **abc** to return to the regular keyboard.
- Tap the shift key (⇧) to activate uppercase letters, and hold down shift to turn on caps lock.
- Long press on a letter to add accented characters.

2.8 Accessibility settings

Open **Settings** and find the **Accessibility settings** (AA) in the menu. This enables you to switch between right- and left-handed mode, and alter the text size on your device.

2.9 Help

Help (🔍) under **Settings** is where you can find copyright, licensing, and compliance information.

2.9.1 About

The **About** section under **Help** contains compliance statements and copyrights and licenses, the End User License Agreement (EULA), as well as information about licenses for different parts of the reMarkable software.

The GPLv3 Compliance section under copyright and licenses contains information about how to access the device via SSH, and the password needed to do so.

Note that any changes made to the reMarkable Paper Pro Move through SSH access is done at the users own risk.

3 Regulatory Compliance and Important Safety Information for model RM03A reMarkable Paper Pro Move

Regulatory Certification and Approval Marks for your paper tablet device can be found locally on your device in Settings, Help, Compliance statement.

3.1 E-label

Follow these steps to find the E-label on the reMarkable Paper Pro Move:

Step 0: Enter the device main/home menu



Step 1: Select **Settings** in the side menu.



3.2 Important safety and handling information

WARNING: Failure to follow these safety instructions could result in fire, electric shock, injury, or damage to the reMarkable Paper Pro Move or other property. *Read all the safety information below before using the device.*

3.2.1 Handling

Handle the reMarkable device with care. When transporting it, we advise you to keep your device in a folio to protect it. The device contains sensitive electronic components that can be damaged if dropped, cracked, burnt or bent. Do not attempt to insert foreign objects into the device.

Don't use the reMarkable device or its accessories in rain or near other wet locations, as it contains electrical components that can be damaged if it comes in contact with liquid. If your device gets wet, unplug all cables and let the device go into sleep mode. Let the device dry completely before turning it on by pressing the power button. Do not attempt to dry your reMarkable Paper Pro Move with an external heat source, such as a microwave oven or hairdryer.

3.2.2 Cleaning

Before cleaning reMarkable Paper Pro Move and its accessories, unplug all cables and turn off the device (press the power button for 4 seconds and tap 'Turn off'). Slightly dampen a soft and lint-free cloth with water. Do not use window cleaners, solvents, aerosol sprays, household cleaners, alcohol, ammonia, or abrasives as this may damage the device permanently. Avoid getting moisture into any of the openings.

3.2.3 Operating temperature

Don't expose the reMarkable device to extreme heat or cold. The device is designed to be used in temperatures between 0° and 35° C (32° and 95° F) and stored in temperatures between -10° and 45° C (14° and 113° F).

3.2.4 Repairing

If your reMarkable Paper Pro Move needs service, do not open the device or attempt to repair it yourself. Disassembling the device may damage the device or cause injury to you. Please contact our customer support for more information.

3.2.5 Battery

The battery in the reMarkable Paper Pro Move should only be repaired or replaced by qualified personnel. Please contact our customer support for more information.


Note: Damaged batteries should be treated as hazardous materials. Do not return the device if the battery is swelling, leaking, or if you in any other way suspect that the battery is damaged. In this case, please document it with a picture or a video and make sure you dispose of or recycle the reMarkable Paper Pro Move and its accessories according to local laws and regulations. Do not puncture, drop or incinerate the battery.

3.2.6 Charging

A charging cable is included with the product. If a 3rd party cable is used it must be compliant to the USB-IF specification and rated for the maximum current associated with the charger, or, a minimum of 3 A.

Charging when the connector is wet or has foreign matter in it may cause fires, electric shocks, or malfunctions.

Chargers used for charging must be compliant and certified to meet local regulations as well as USB-IF charging specifications and a power output of less than 30W. The power delivered by the charger must be between min 5 Watts required by the radio equipment, and max 15 Watts in order to achieve the maximum charging speed.

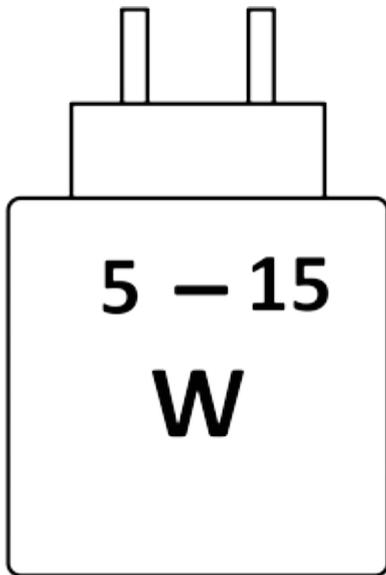

3.2.7 Choking hazard

The device and accessories contain small parts that may present a choking hazard and must be kept away from small children.

3.2.8 Distraction

Using the reMarkable device can be distracting and may possibly cause dangerous situations. Avoid using the device while operating a vehicle.

3.2.9 Radio frequency energy exposure and interference

The reMarkable Paper Pro Move uses radio signals to connect to Wi-Fi. It is designed and manufactured not to exceed the exposure limits for radio frequency energy as set by the Federal Communications Commission of the United States (FCC). For more information read the FCC Compliance Statement or input your device's FCC ID into the FCC ID search form available at <https://www.fcc.gov/oet/ea/fccid>.

Although the reMarkable Paper Pro Move complies with the regulations governing RF emission, the energy exposure from the device may negatively affect the operation of other electronic equipment.

To prevent possible interference or danger, Wi-Fi on the device should be turned off in areas where a wireless connection is forbidden, such as within an aircraft system. Be aware that RF signals could constitute a hazard in areas such as health care facilities or construction sites, and use of Wi-Fi may be restricted. The device should not be used or charged with potentially explosive atmospheres.

3.2.10 Medical device interference

The reMarkable Paper Pro Move contains magnets, as well as components and radios that emit electromagnetic fields. These may interfere with personal medical devices, such as pacemakers or defibrillators, that are sensitive to magnetic and electromagnetic fields.

Ensure to maintain a safe distance between the reMarkable Paper Pro Move and your medical device, and consult with a physician if interference is observed.

Note that objects with magnetically-stored data may be sensitive to magnetic or electromagnetic fields. Hence, items such as credit cards and hard drives should not be placed near the device.

3.3 Battery damage

Damaged batteries should be treated as hazardous materials. Do not return the device if the battery is swelling, leaking, or if you in any other way suspect that the battery is damaged. In this case, **please document it with a picture or a video** make sure you dispose of or recycle the reMarkable Paper Pro Move and its accessories according to local laws and regulations. Do not puncture, drop, or incinerate the battery.

3.4 EU Recycling Information (WEEE)



In accordance with the European Union's directive (2012/19/EU) on the Waste of Electrical and Electronic Equipment (WEEE), this symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate

collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

3.5 Natural Resources Canada (NRCAN)



The device is certified for Natural Resources Canada Energy Efficiency.

3.6 EU Declaration of conformity (CE)

The full text of the EU declaration of conformity is available at the following internet address: [EU Declaration of Conformity](#)

3.7 EU compliance statement (CE)



reMarkable declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

Requirements in

AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/UK(NI)/HR. 5150MHz~5350MHz is for indoor use only

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 1.595 W/kg (body) and 1.595 W/kg (limbs) averaged over 10 grams of tissue.

Maximum transmit power

Bluetooth	20 dBm
WLAN 2.4G	20 dBm
WLAN 5G	23 dBm
WLAN 5G B4	14 dBm
NFC WPT (Wireless Power Transfer)	-8.79 dBuA/m@10m

3.8 USA compliance statement (FCC)

Remarkable Paper Pro Move (Model RM03A) FCC ID: 2AMK2-RM03AA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.19 W/kg.

3.9 Canada compliance statement (IC)

Remarkable Paper Pro Move (Model RM03A) IC: 22859-RM03AA

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

1. Les dispositifs fonctionnant dans la bande de 5150 à 5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

This equipment complies with Innovation, Science and Economic Development Canada's radiation exposure limits set forth for an uncontrolled environment. The End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is designed to meet the requirements for exposure to radio waves established by the Innovation, Science and Economic Development Canada's. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.19 W/kg.

Ce matériel répond à l'innovation, science et développement économique Canada est l'exposition maximale fixée pour un autre environnement. L'utilisateur final doit suivre les instructions d'exploitation de l'exposition aux radiofréquences spécifiques pour satisfaire la conformité. Cet émetteur ne doit pas être situées ou opérant conjointement avec toute autre antenne ou l'émetteur.

Le dispositif est conçu pour répondre aux exigences de l'exposition aux ondes radio créée par la science et l'innovation, développement économique Canada. Ces exigences limite de sar de 1.6 W / kg en moyenne pour un gramme de tissu. La valeur de r - s en vertu de cette norme plus élevée au cours de la certification de produits déclarés pour une utilisation bien portés sur le corps est 1.19 W/kg.

3.10 Australia and New Zealand compliance statement



This device complies with the requirements of the electrical and EMC regulations of Australia and New Zealand in accordance with AS/NZS 4417 Parts 1, 2, 3, and 4

3.11 Taiwan compliance statement (NCC/BSM)

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

應避免影響附近雷達系統之操作。

使用過度恐傷害視力

- (1). 使用30分鐘請休息10分鐘。
- (2). 未滿2歲幼兒不看螢幕，2歲以上每天看螢幕不要超過1小時

設備名稱: 行動助理, 型號 (型式) : RM03A Equipment name Type designation (Type)						
單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板	○	○	○	○	○	○
外殼	○	○	○	○	○	○
玻璃面板	○	○	○	○	○	○
傳輸線材(USB-Cable)	○	○	○	○	○	○

備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。

Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. “—” 係指該項限用物質為排除項目。

Note 3: The “-” indicates that the restricted substance corresponds to the exemption.


台灣代理商

公司名稱: 西華科技開發股份有限公司

地址: 高雄市鼓山區龍勝路156 號14 樓

電話: 07-3133184

3.12 Singapore compliance statement

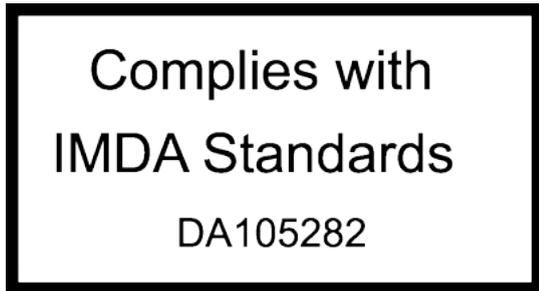

3.13 Japan compliance statement



R - 201-250378

Operation in the 5.15-5.35 bands is restricted to indoor use only
電波法により5.15-5.35 GHz帯は屋内使用に限ります

3.14 South Korea compliance statement (KC-R and KC Safety)



KC ID: R-C-rMS-RM03AA

안전인증번호 : xxxxxxxx-xxxxx

제 품 명 : reMarkable Paper Pro Move (태블릿 PC)

(특정소출력 무선기기 (무선랜을 포함한 무선접속시스템용 무선기기

(5150~5350MHz, 5470~5850MHz 주파수 대역)))

모 델 명 : RM03A

정 격 : 5Vdc, 3A

제 조 자 : reMarkable AS

3.17 UAE compliance statement (TRA, ECAS)



Models: RM03A
Voltage: 5Vdc
Max. Current: 3A

TRA:
TRA RTTE REGISTERED No.: ER35716/24
Dealer ID: DA88552/20

3.18 India compliance statement (BIS)

Caution: risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions

To prevent possible hearing damage, do not listen at high volume levels for long periods.



3.19 Brazil compliance statement (ANATEL)

Este products está homologado pela Anatel de acordo com os procedimentos regulamentados para avaliação da conformidade de produtos para telecomunicações e atende aos requisitos técnicos aplicados, incluindo os limites de exposição da Taxa de Absorção Específica referente a campos elétricos, magnéticos e eletromagnéticos de radiofrequência. Informamos que o máximo valor de SAR medido para este produto localizado no corpo é: x.xx mW/g (corpo).

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Para maiores informações, consulte o site da ANATEL – www.gov.br/anatel/pt-br